

Parts of the device.

Let us begin by getting to know the main buttons and parts of your device.



Power button

This is the side button.
Press it briefly to turn
the screen on or off, or
press and hold it to turn
the phone fully on or off.


Parts of the device.

Action button (on some iPhone models)

This is a programmable button on the side. By default, it turns Silent Mode on or off, but it can be set to do something else, such as open the camera.

Volume buttons

These are two buttons on the side of the device. One increases the volume and the other decreases it.

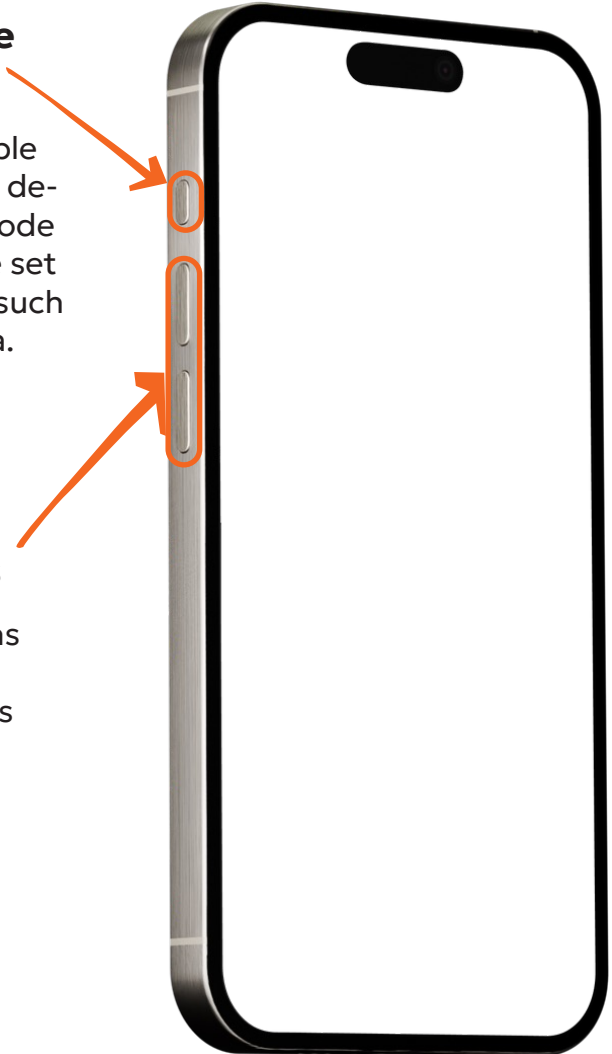

Front camera

This is the small lens above the screen, on the front of the device. You use it for selfies and video calls, so people can see your face while you speak.



Charging port

This is the small opening where you connect the charging cable. Always use the original charger for your device, and avoid charging it in a very hot or damp place.

Speakers

This is where you hear the sound from calls, videos, and notifications.

Parts of the device.



Camera

On the back of the device, you will usually see two or three lenses together, as well as a small light called the flash. Each lens is used for a different type of photo. You do not need to choose which lens to use; the Camera app does that automatically. The flash turns on automatically in dark places to light your photo.